

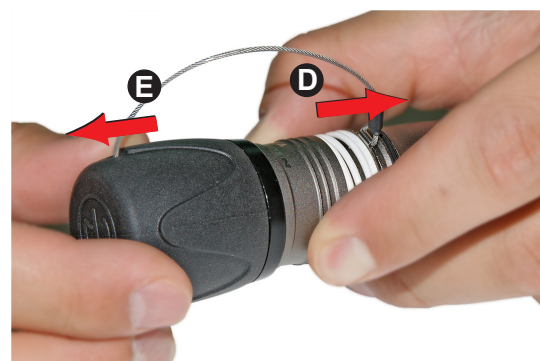


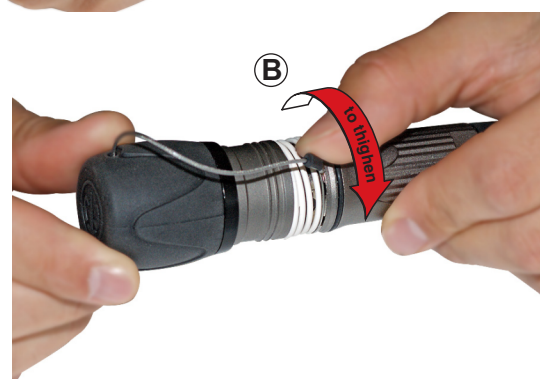

HANDLING INSTRUCTION

SCNO*X-R & SCNO-FDW-R | opticalCON protection covers

SCNO*X-R | opticalCON - cable connector cover

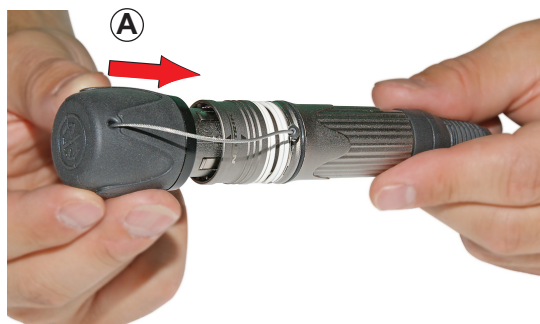

Mate protection cover

- Ⓐ Push the cover onto the connector front shell until it locks.
- Ⓑ Rotate the safety ring to tighten the steel cord around the connector body to protect the steel cord from damage.

FINISH



Protection cover removal

- Ⓒ Rotate the safety ring to lose the steel cord.
- Ⓓ Release the connector locking device.
- Ⓔ Remove protection cover.

FINISH






SCNO-FDW-R | opticalCON - chassis connector cover

Dust cover assembly

- Ⓐ Mount steel cord onto the opticalCON chassis connector.

Dust cover handling

- Ⓑ Push the cover completely into the chassis until you feel a locking snap.

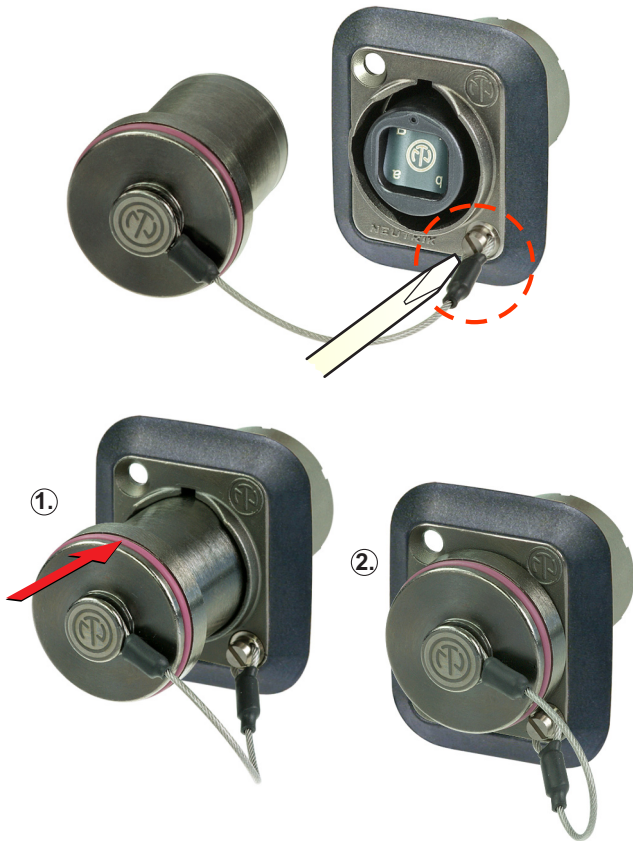

Applications example:

Cover application of chassis and cable connector (SCNO*X-R & SCNO-FDW-R).

- Ⓑ Mate cable connector and chassis connector cover to avoid contamination as long the connector is plugged.



NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
 NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052