

ASSEMBLY INSTRUCTION etherCON® TOP | NE8MX-TOP

Ruggedized RJ 45 Data Connector, IP65 and UL50E

IP65 RATED AND UL50E APPROVED.




- A Cut cable end approx. 45°.
- B
- **B** Slide the bushing over the cable.


To ease the boot assembly apply some cable pulling lubricant to the cable ends.



- (C) Assemble the RJ45 plug on the cable.
- ©1) Cut off the release tab of RJ45 plug.

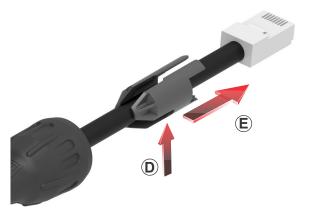

Put the chuck onto the cable.Align the opening with the contact side.

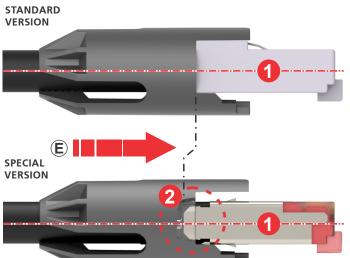


(E) Position the RJ45 in the chuck.

Attention:


- 1 RJ45 must be straight.
- 2 Special versions must engage in the inner recess of the chuck.

BDA 547 Page 1




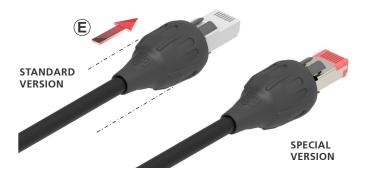

(E) Position the bushing onto the chuck.

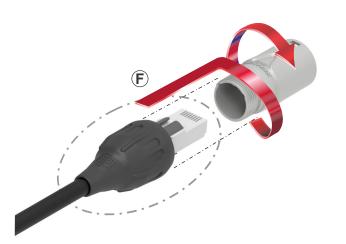

F Slide the unit (insert and boot) into the housing and tighten the bushing.

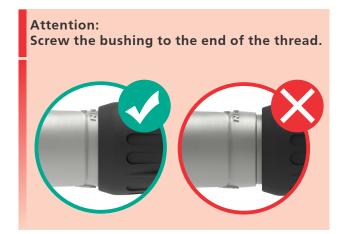



G CAUTION:

There is no overlap allowed.



Find more etherCON° details on www.neutrik.com.



NEUTRIK AG	LI	T: +423 / 237 24 24	F: +423/232 53 93	NEUTRIK France	FR	T: +33 1/4131 6750	F: +33 1/4131 0511
NEUTRIK USA Inc.	USA	T: +1 704 / 972 3050	F: +1 704/438 9202	NEUTRIK Tokyo Ltd.	JP	T: +81 3/3663 4733	F: +81 3/3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983/811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852/2687 6055	F: +852/2687 6052
NEUTRIK Vertriebs GmbH	DE/NL/AT/DK	T: +49 8131 / 280 890	F: +49 8131/280 830	NEUTRIK India Pvt. Ltd.	IND	T: +91/982 05 43 424	F: +91/22 26163 540

Draft. Nr.: BDA 547 | Update: 06.09.2018 | Data subject to change without prior notice. ©2018 NEUTRIK*. ALL RIGHTS RESERVED. NEUTRIK* are registered trademark.

