


ASSEMBLY INSTRUCTION NC3FXX-EMC & NC3MXX-EMC | XLR Cable Connector

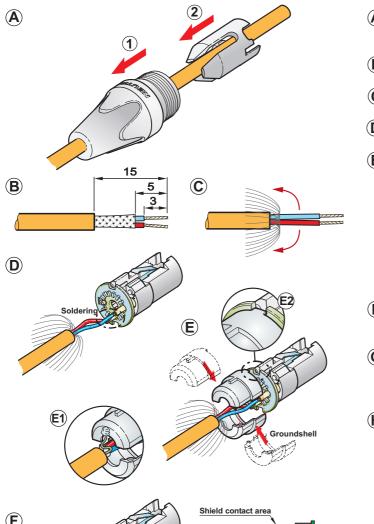


- (A) 1. Slide the boot onto the cable. 2. Put chuck onto the cable.
- **B** Prepare cable as shown.
- **C** Fold back the cable-shield as shown.
- (D) Insert wires into the terminals and solder them.
- (E) Position the ground-shells over the conductors as shown.

In Case of cable with foil shield only: Solder drain wire to the ground shell (E1). Keep drain wire as short as practical, proceed with step

Pay attention to inserting coding-rib of ground shell (E2), into dedicated recess of pcb.

- (F) Lay cable-shield over ground shell. Distribute wires circumferentially.
- **G** Slide chuck over cable-shield and ground shells towards end-position aligning the slots of the chuck to the ribs of the ground shells.
- (H) Slide insert into the housing.

Finish the installation by turning the bushing onto the connector.

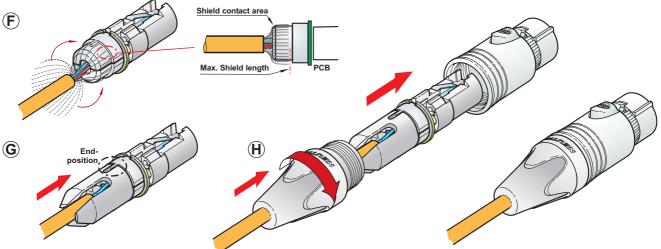

NEUTRIK AG NEUTRIK Zürich AG NEUTRIK USA Inc. NEUTRIK (UK) Ltd.

T: +423/2372424

F: +423/232 53 93 T: +41 44/736 5010 F: +41 44/736 5011 T: +1732/9019488 F: +1732/9019608 T: +44 1983 / 811 441 F: +44 1983 / 811 439 NEUTRIK Vertriebs GmbH **NEUTRIK France NEUTRIK Tokyo Ltd.** NEUTRIK Hong Kong Ltd. HK

DE/NL/AT

T: +49 8131/280 890 F: +49 8131/280 830 T: +33 1 / 4131 6750 F: +33 1 / 4131 0511 T: +81 3 / 3663 4733 F: +81 3 / 3663 4796 T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 136 / 3102M1411 | Update: 28.09.2009 | Data subject to change without prior notice. @2009 NEUTRIK* .ALL RIGHT'S RESERVED.



СН

UK

USA